

PARTS LIST

TYPE 32/36 DFAV – PART NO. 22680.056

32/36 DFEV – PART NO. 22680.070

Dia No.	Qty. Req'd	Description	Part Number	Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Cover Assy	Not Serviced	51	1	Screw Plug	61015.003
2	4	Stud Bolt	64955.002	52	1	Screw Securing Auto Choke Body	64700.015
3	5	Top Cover Fixing Screw	64700.005	53	1	Gasket For Auto Choke Body	41640.005
4	1	Top Cover Gasket	41705.034	54	1	Auto Choke Thermostat Assy	57804.076
5	1	Primary Air Corrector Jet	77201.*	54a	1	Electric Choke Thermostat	57804.332
5a	1	Secondary Ari Corrector Jet	77201.*	55	3	Thermostat Assy Locking Ring	52135.006
6	1	Pump Delivery Valve Assy	64290.024	56	1	Water Chamber Seal Gasket	41555.001
7	1	Primary Emulsion Tube	61440.*	57	1	Water Cover Fixing Screw	64615.001
7a	1	Secondary Emulsion Tube	61440.*	58	1	Gasket For Screw	41530.002
8	2	Pump Jet Gasket	41540.014	59	1	Auto Choke Water Chamber	32444.010
9	1	Accelerator Pump Jet	76211.*	60	1	Choke Shaft & Lever Assy	10085.031
10	1	Power Valve Assy	57804.025	61	3	Screw Securing Auto Choke Cover	64700.007
11	1	Needle & Seat	79519.*	62	1	Spring Retaining Cover	58000.018
12	1	Float Fixing Pin	52000.015	63	1	Spring Washer	Not Serviced
13	1	Plastic Float	41030.022	64	1	Fixing Nut	Not Serviced
14	1	Primary Idle Jet	74403.*	65	2	Screw Securing Auto Choke Body	64700.023
14a	1	Secondary Idle Jet	74403.*	66	1	Plate For Choke Shaft	52130.012
15	2	Idle Jet Holder	52570.005	67	1	Washer For Shaft	55555.029
16	1	Carb Body	Not Available	68	1	Idle Adjusting Screw	64750.001
17	1	Secondary Throttle Control Lever	45032.013	69	1	Spring For Idle Adjusting Screw	47600.007
18	1	Flat Washer	55510.046	70	1	Gasket For Auto Choke Body	41565.008
19	1	Spring Washer	55525.001	71	1	Accelerator Pump Cover Assy	32486.034
20	1	Fixing Nut	34705.001	72	4	Pump Cover Fixing Screw	64700.004
21	1	Spring For Loose Lever	47605.010	73	1	Accelerator Pump Diaphragm Assy	47407.261
22	1	Primary Loose Lever Assy	45069.006	74	1	Pump Loading Spring	47600.107
23	1	Flat Washer	55510.061	75	4	Throttle Valve Fixing Screw	64520.023
24	1	Throttle Control Lever	Not Serviced	76	1	Primary Throttle Valve	64005.090
25	1	Lock Washer	55520.002	77	1	Primary Main Shaft Assy	Not Serviced
26	1	Fixing Nut	34715.014	77a	1	Primary Main Shaft Assy Oversize	10016.475
27	1	Bushing For Loose Lever	12765.002	78	1	Secondary Main Shaft Assy	10015.413
28	1	Lever For Throttle Adjusting Screw Including	Not Serviced	79	1	Secondary Throttle Valve	64005.034
29	1	-Lever	45039.022	80	1	Primary Main Jet	73801.*
30	1	-Spring	47600.073	80a	1	Secondary Main Jet	73801.*
31	1	-Screw	64625.006	81	1	Power Valve Gasket	41530.013
32	1	Secondary Throttle Adjusting Screw	64595.005	82	1	Full Power Need Valve	64235.016
33	1	Primary Shaft Return Spring	47610.012	83	1	Gasket For Needle Valve	83102.070
34	1	Washer	55555.016	84	3	Power Valve Fixing Screw	64700.007
35	1	Fast Idling Loose Lever Including	Not Serviced	85	1	Strainer Inspection Plug	61002.018
36	1	-Screw	64590.004	86	1	Locking Ring	10140.501
37	1	-Spring	47600.007	88	1	Choke Shaft & Lever Assy	10020.214
38	1	-Lever	Not Serviced	89	4	Choke Plates Fixing Screw	64525.003
39	1	Screw Securing Fast Idle Loose Lever	64700.014	90	1	Dust Seal Plug	61070.002
40	1	Bushing For Fast Idle Loose Lever	12765.042	91	1	Dust Seal Plate	52135.018
41	1	Washer	55530.005	92	1	Strainer Assy	37022.010
42	1	Fast Idling Control Rod	61280.042	93	2	Choke Throttle Valve	64010.006
43	1	Flat Washer	55510.003	94	3	Screw For Thermostat Plate	64615.005
44	1	Choke Shaft Control Lever	Not Serviced	95	1	Pump Discharge Blanking Needle	64900.001
45	1	Spring For Fast Idle Cam	47610.083	96	3	Flat Washer	55510.038
46	3	Auto Choke Body Assy	57804.072	97	2	Auxiliary Venturi	71110.*
47	1	Choke Diaphragm Assy	47407.080	98	1	Choke Device 35-52; 61-67	57804.119
48	1	Spring For Diaphragm	47600.141			*Calibrated Parts Require 3 Digits To Complete Part Number	
49	1	Cover For Choke Diaphragm	32384.022			See Calibrated Parts Section For Sizes.	
50	1	Diaphragm Adjusting Screw	64595.005				